
CHILD RESTRAINT SYSTEM INFORMATION

MODEL ALPHA (AY913 PLUS)

GROUP i-SIZE (40CM-150CM)

BRAND CROLLA

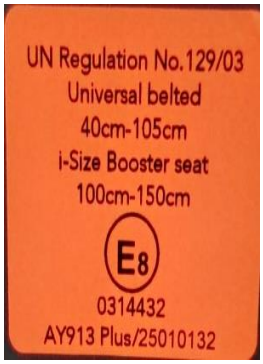

00090592

UNR TESTING INFORMATION

Regulation	UN R129
Approval Number	E8*129R03/08*14432*01
CTA Reference Number	JPJ.BKA.600-3/3/33 Jld 320(84)
CTA Approval Date	20 January 2025

INSTALLATION TYPE

Installation Type/ Direction	Seatbelt	ISOFIX	Top Tether	Support Leg
Rear Facing	✓	N/A	N/A	N/A
Forward Facing	✓	N/A	N/A	N/A

PHOTOS

Rear Facing

Front view	Left view	Rear view	Right view
			

Forward Facing

Front view	Left view	Rear view	Right view
			

CHILD RESTRAINT SYSTEM INFORMATION

COLOUR VARIANT



TIFFANY BLUE




UNICORN



GOLD

INSTALLATION

Group	Installation Method
40cm – 105cm	

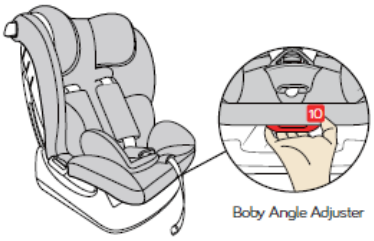

- Step 1:
  Pull out the positioning handle 10 under the seat, adjust the recline level to level 4 , and hear a sound of "click".



- Step 2:
  Place the child seat on the car seat rearward facing and make sure that the front of the child seat is firmly pressed against the car seat backrest.




Tighten the harness

- Pull the shoulder strap upward to remove the slack from the lap sections of the harness then pull the adjuster strap 11 the harness is fully tightened.

The shoulder strap should be adjusted as tightly as possible without causing discomfort to your child. A loose harness can be dangerous.

Check the harness adjuster and tighten each time when the child is placed in the seat

3.6 Adjust the child seat to different incline positions

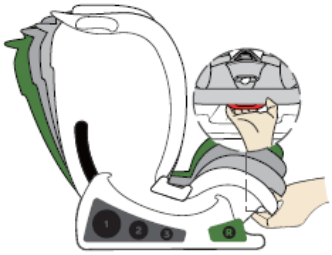

- Step 1:
  The child seat can be adjusted 4 different positions.
  The rearward installation (height 40-105cm) has one gear
  The forward installation (height 76-150cm) has three gears



- Step 2:
  Press the red recline adjustment handle, and adjust the child seat to the proper position.

Important: Check to make sure the child seat is securely locked in the desired position by pulling the positioning handle

CHILD RESTRAINT SYSTEM INFORMATION

76cm – 150cm




- **Step 1:**
  Press the positioning handle 10 under the seat, adjust recline level to 1, 2 or 3 and hear a sound of "click".



- **Step 2:**
  Insert the diagonal belt and lap belt into the car seat belt buckle until you hear a "click" sound. Pull the seat belt upwards to ensure the buckle is securely locked.

  When using, it should be confirmed that the buckle of the adult 3-point belt does not interfere with the main load-bearing contact point of the child restraint system. If in doubt, pls contact the manufacturer of the child restraint system.

3.2 Adjust headrest

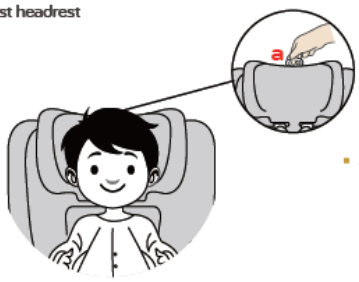

- As shown in the picture, you can adjust the headrest up and down by pulling on the headrest adjustment handle a. Make sure to adjust the headrest according to the child's height, ensuring that the bottom of the headrest aligns with the child's shoulder level.

3.3 Checking the shoulder strap height



- Always check that the shoulder straps are at the correct height for your child. The child's shoulder straps should always be thread through the slots in the cover and seat shell that are closest to the top of your child's shoulders.

100cm -150cm

4.3 Installed forward-facing (Height:100-150CM, Weight: 15-36kg)



- **Step 1:**
  Remove Buckle and Harness strap from the car seat (refer to 3.7, 3.8, 3.9).



- **Step 2:**
  Place the child on the car seat and adjust the height of the headrest. Make sure that the headrest is at the height of the child's shoulder and is fixed

- **Step 3:**
  Pull out the car seat belt, the shoulder strap must pass through the headrest, and then pass through the belt slot 03 together with the lap belt, insert it into the buckle slot.

  Make sure the car seat belt is not slack or twisted. When using, it should be confirmed that the buckle of the adult 3-point belt does not interfere with the main load-bearing contact point of the child restraint system. If in doubt, pls contact the manufacturer of the child restraint system.