CHILD RESTRAINT SYSTEM INFORMATION

MODEL ALTAS (AY829)

GROUP i-SIZE (40CM -150CM)

BRAND CROLLA



UNR TESTING INFORMATION

Regulation	ECE R129
Approval Number	E1*129R04/02*0166*00
CTA Reference Number	JPJ.BKA.600-3/3/33 Jld 344(78)
CTA Approval Date	12 MAY 2026

INSTALLATION TYPE

Installation Type/ Direction	Seatbelt	ISOFIX	Top Tether	Support Leg
Rear Facing	N/A	✓	N/A	✓
Forward Facing	N/A	✓	N/A	✓

PHOTOS

Rear Facing

Front view	Left view	Rear view	Right view
			

Forward Facing

Front view	Left view	Rear view	Right view
			

CHILD RESTRAINT SYSTEM INFORMATION

COLOUR VARIANT








Gold



Creamy

INSTALLATION

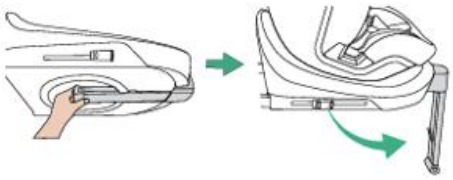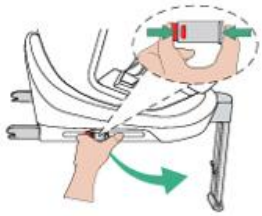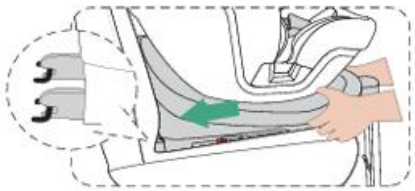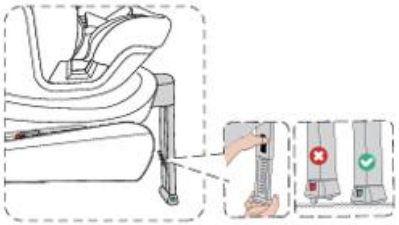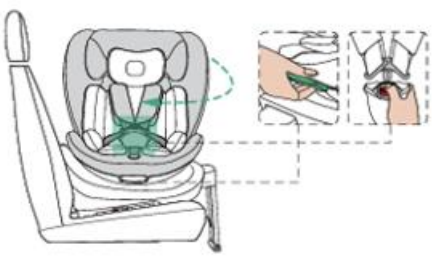Group	Installation Method
40cm – 105cm	**4.1 REARWARD FACING INSTALLATION:** Height: 40 - 105cm  Lift up the seat and take out the support leg until the support leg is at a 90° perpendicular. Then pull it forward until you hear a “click.  Press and hold the ISOFIX release buttons on both sides, then push the ISOFIX connectors out.  Clip them into the ISOFIX anchor points. When you hear a "click" sound and the ISOFIX indicator turns GREEN ( ), it means it is locked  Press and hold the adjustment button on the support leg, extend it until it touches the car ground and the indicator at the bottom of the support leg will  Pull the rotation adjuster button to rotate the seat to the 90° facing door direction. Then undo the buckle and move the shoulder straps to the sides

CHILD RESTRAINT SYSTEM INFORMATION




Place the child in the seat, lock the buckle, and tighten the shoulder straps. Then pull the rotation adjuster button to rotate the seat to the rearward facing direction.

76cm – 105cm


4.2 FOWARD FACING INSTALLATION:

HEIGHT: 76 - 105cm


The comfortable cushion should be removed when the child's height exceeds 75 cm.

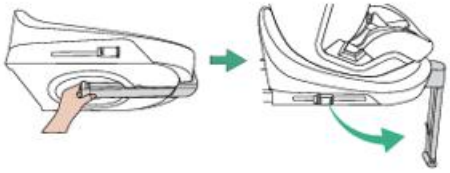


Lift up the seat and take out the support leg until the support leg is at a 90° perpendicular. Then pull it forward until you hear a "click.

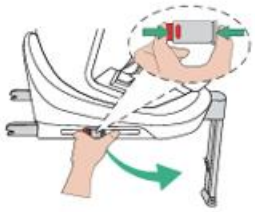


Press and hold the ISOFIX release buttons on both sides, then push the ISOFIX connectors out.

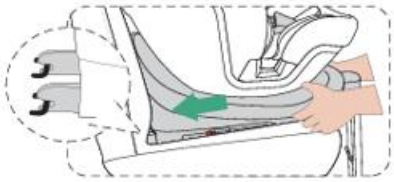

Clip them into the ISOFIX anchor points. When you hear a "click" sound and the ISOFIX indicator turns GREEN ( ), it means it is locked

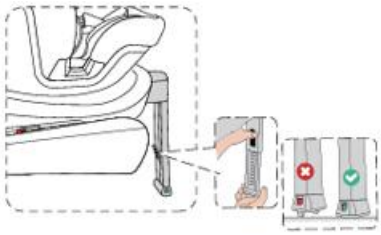

Press and hold the adjustment button on the support leg, extend it until it touches the car ground and the indicator at the bottom of the support leg will

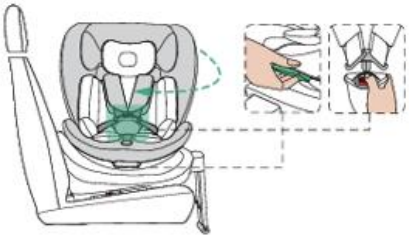

Pull the rotation adjuster button to rotate the seat to the 90° facing door direction. Then undo the buckle and move the shoulder straps to the sides



Place the child in the seat, lock the buckle, and tighten the shoulder straps. Then pull the rotation adjuster button to rotate the seat to the forward facing direction.

CHILD RESTRAINT SYSTEM INFORMATION


100cm -150cm

4.3 FOWARD FACING INSTALLATION:


HEIGHT: 100 - 150cm

USAGE: ISOFIX+3 point belt

When a child's height is ≥100cm, the buckle, crotch pad and shoulder covers on the seat need to be removed before use!

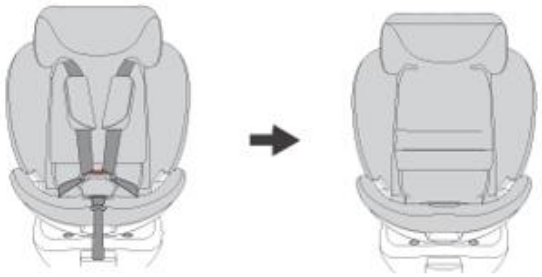

REMOVAL STEPS:

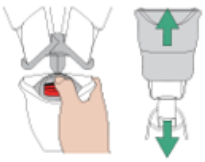


STEP 1:

Open the buckle and pull it out from the crotch pad.

STEP 2:

Open the shoulder covers on both sides, then detach the covers and straps from the headrest hook.



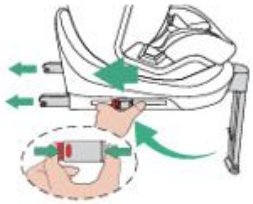


STEP 3:

Place the removed buckle into the buckle storage slot under the seat cover, insert the side pieces into the side slots, and straighten the seat cover

STEP 4:

Fold the Support Leg: Press and hold the support leg release button to to shorten the support leg. Then lift the base and push the support leg into the compartment underneath the base.

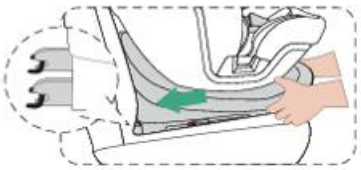

Install the ISOFIX:

Press and hold the ISOFIX release buttons on both sides, then push the ISOFIX connectors out.

STEP 5:

Clip them into the ISOFIX anchor points. When you hear a "click" sound and the ISOFIX indicator turns GREEN (), it means it is locked.

CHILD RESTRAINT SYSTEM INFORMATION

STEP 6:

Put the child into the safety seat, adjust the headrest up according to the child's height

STEP 7:

Pull out the 3-point seat belt then pass through the shoulder belt guide of the headrest and the lap belt must pass through the lap belt guiding (as shown in the picture). Then buckle it.

