


# CHILD RESTRAINT SYSTEM INFORMATION

MODEL **S62 (RUVAFIX)**

GROUP **0+ / 1 / 2 / 3**

BRAND **KOOPERS**

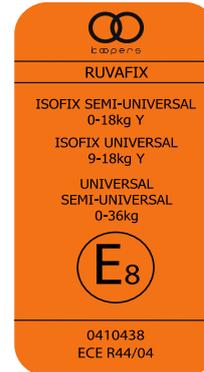

0040076


## UNR TESTING INFORMATION

Regulation	ECE R44/04
Approval Number	0410438
CTA Reference Number	JPJ.BKA.600-3/3/33 Jld 51 (30)
CTA Approval Date	23 DECEMBER 2019

## INSTALLATION TYPE

Installation Type/ Direction	Seatbelt	ISOFIX	Top Tether	Support Leg
Rear Facing	✓	✓	✓	N/A
Forward Facing	✓	✓	✓	N/A

## PHOTOS

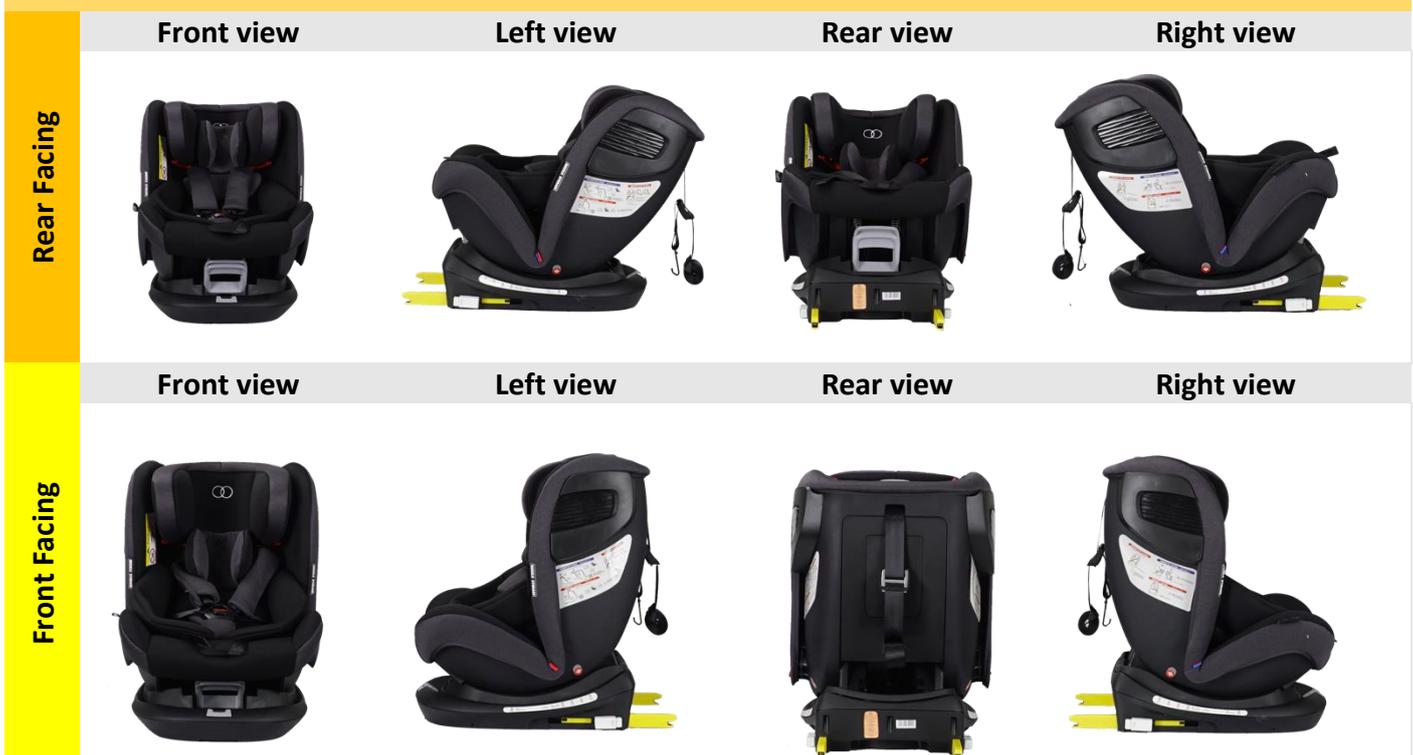

# CHILD RESTRAINT SYSTEM INFORMATION

## COLOUR VARIANT



## INSTALLATION

### Group

### Installation Method

**0/0+**  
**Up to 83cm**  
**0-13kg**

### BELT INSTALLATION

#### 5. INSTALLED IN CAR

##### 5.1 Installed in Car with Belt

##### 5.1.1 Installed in Rearward Facing Position with Belt

##### 5.1.1.1 Group 0+(0-13KG)

Pull the vehicle seatbelt and pass the lap belt section through the belt guidance<sup>③</sup> and under the sleeping cushion.


Pass the diagonal seat belt section through the belt guidance<sup>②</sup>

Fasten the seat belt and pull it tight, ensuring that the seat belt is not twisted.

**NOTE:** For children of this size, the child seat must only be installed in the rearward facing position and at a maximum angle of inclination (lying level). To make sure that the car seat has been installed correctly, please shake it before use.

**DO NOT** twist the belt!

Ensure that the buckle tongues are properly locked into the vehicle seat buckle - you will hear an audible **CLICK!**

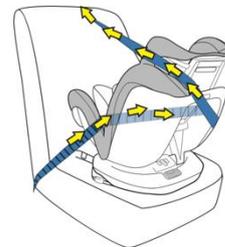



### ISOFIX INSTALLATION

**NOTE:** The ISOFIX attachment points are located between the surface and the backrest of the vehicle seat.

Press the ISOFIX button to pull out the two locking arms from the base bottom. Pull the locking arm to and fro until you hear an audible **CLICK** which indicates they are fully engaged. And on both sides of the locking arms button turn into green safety color.

Pull out the top tether, and press the release button, pull the top tether long enough to hang the latch on the back of the car seat.

Fix the latch on the fixed point, and the position of the fixed point are shown in the picture (one of the three positions). Make sure the hook is tightened up.

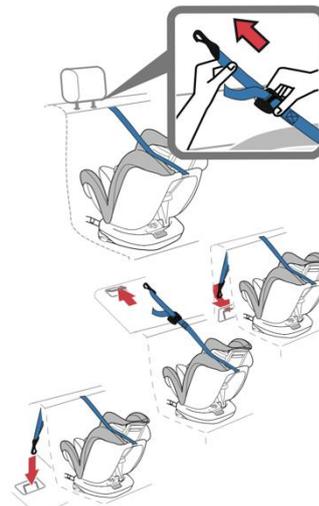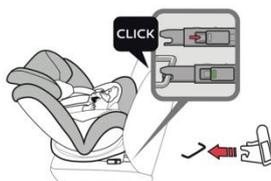

# CHILD RESTRAINT SYSTEM INFORMATION

## BELT INSTALLATION

5.1.2 Installed in Forward Facing Position with Belt

5.1.2.1 Group I (9-18KG)


Place the child seat forward facing on the vehicle seat (in the direction of travel).

Pull the diagonal belt section through belt guidance<sup>②</sup>. Place the lap belt section in the red belt guidance<sup>③</sup>.

Pull out safety belt from the back to the side, lap belt section respectively from the belt guidance<sup>③</sup> of the base. One side of the diagonal belt through the backrest and the belt guidance<sup>③</sup>, another side along the upper inside.

Using your knee to press down on the child seat, tighten the vehicle seat belt as follows:

Pull on the lower part of the diagonal seat belt section near the vehicle seat buckle to tighten the lap belt section.

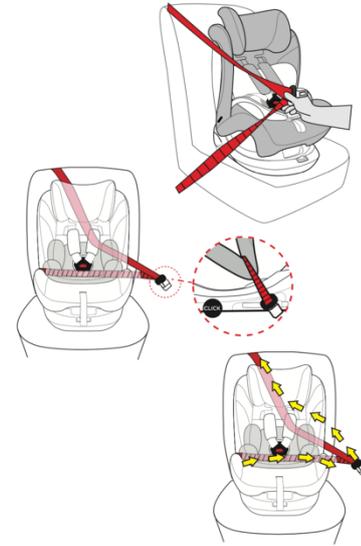

## ISOFIX INSTALLATION

5.2.2 Installed in Forward Facing Position with ISOFIX

5.2.2.1 Group I (9-18KG)

Put the ISOFIX insert guide into the two ISOFIX attachment points of your vehicle.


If you don't have ISOFIX insert guide, please ignore this step.

NOTE: The ISOFIX attachment points are located between the surface and the backrest of the vehicle seat.

Press the ISOFIX button to pull out the two locking arms from the base bottom. Pull the locking arm to and fro until you hear an audible CLICK which indicates they are fully engaged. And on both sides of the locking arm's button turn into green safety color.

Pull out the top tether and press the release button, pull the top tether long enough to hang the latch on the back of the car seat.

Fix the latch on the fixed point, and the position of the fixed point are shown in the picture (one of the three positions). Make sure the hook is tightened up.

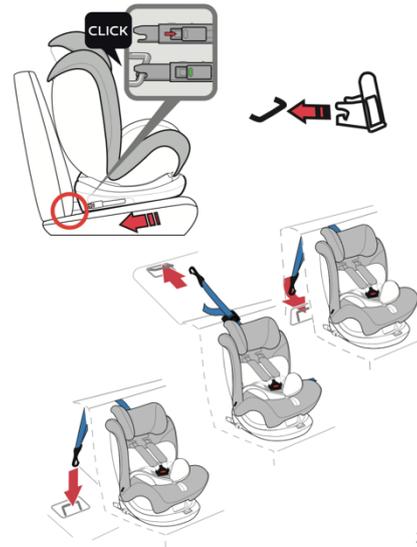

22

1

71cm and above  
9-18kg

# CHILD RESTRAINT SYSTEM INFORMATION

## BELT INSTALLATION

### 5.1.2.2 Group II III (15-36KG)


**NOTE:** When you use this safety car seat in Group II III, please remove the 5-point harness, sleeping pads and the triangle pads refer to Chapter 4. 7. Place the child seat forward facing on the vehicle seat(in the direction of travel).

Step1: First pull out the belt from the belt ALR. Diagonal belt through Guidance① and lap belt through the belt slot, then put them together through Guidance③ slot.

**NOTE:** Make sure that the diagonal seatbelt section runs over your child's shoulder bone, and not in front of his or her neck.

Step2: Lock the tip of the buckle into the vehicle seat buckle with a CLICK noise. Follow the direction of arrow to tighten belt, and put redundant belt into cloth cover. Shake the child safety car seat to make sure it is securely attached

**CAUTION!** The diagonal seat belt section must run diagonally backward. You can adjust the course of the belt with your vehicle's adjustable belt deflector on both sides.

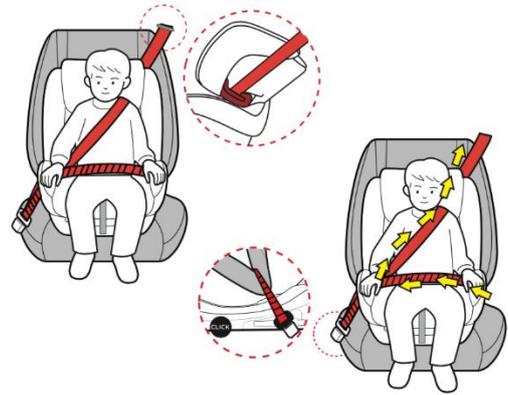

## ISOFIX INSTALLATION


### 5.2.2.2.1 Installed with ISOFIX connector and Belt

Step1: First pull out the belt from the belt ALR. Diagonal belt through Guidance① and lap belt through the belt slot, then put them together through Guidance③ slot.

**NOTE:** Make sure that the diagonal seatbelt section runs over your child's shoulder bone and not in front of his or her neck.

Step2: Lock the tip of the buckle into the vehicle seat buckle with a CLICK noise. Follow the direction of arrow to tighten belt, and put redundant belt into cloth cover. Shake the child safety car seat to make sure it is securely attached.

**CAUTION!** The diagonal seat belt section must run diagonally backward. You can adjust the course of the belt with your vehicle's adjustable belt deflector on both sides.

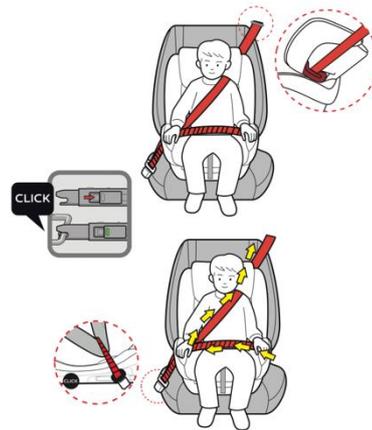

### 5.2.2.2.2 Installed with ISOFIX connector Top Tether and Belt

Step1: Pull out the top tether and press the release button, pull the top tether long enough to hang the latch on the back of the car seat.


Fin the latch on the fixed point and the position of the fixed point are shown in the picture(one of the three positions). Make sure the hook is tightened up.

Step2: First pull out the belt from the belt ALR Diagonal belt through Guidance① and lap belt through the belt slot, then put them together through Guidance③ slot.

**NOTE:** Make sure that the diagonal seatbelt section runs over your child's shoulder bone and not in front of his or her neck.

Step3: Lock the tip of the buckle into the vehicle seat buckle with a CLICK noise. Follow the direction of arrow to tighten belt, and put redundant belt into belt ALR. Shake the child safety car seat to make sure it is securely attached.

**CAUTION!** The diagonal seat belt section must run diagonally backward. You can adjust the course of the belt with your vehicle's adjustable belt deflector on both sides.

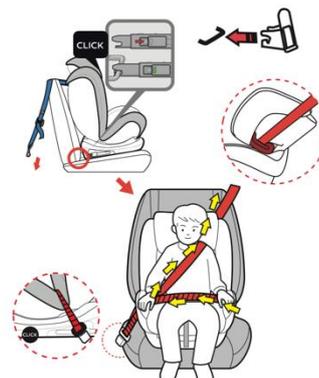

2  
100cm and above  
15-25kg

# CHILD RESTRAINT SYSTEM INFORMATION

## BELT INSTALLATION

### 5.1.2.2 Group II III (15–36KG)


**NOTE:** When you use this safety car seat in Group II III, please remove the 5-point harness, sleeping pads and the triangle pads refer to Chapter 4. 7. Place the child seat forward facing on the vehicle seat(in the direction of travel).

Step1: First pull out the belt from the belt ALR. Diagonal belt through Guidance① and lap belt through the belt slot, then put them together through Guidance③ slot.

**NOTE:** Make sure that the diagonal seatbelt section runs over your child's shoulder bone, and not in front of his or her neck.

Step2: Lock the tip of the buckle into the vehicle seat buckle with a CLICK noise. Follow the direction of arrow to tighten belt, and put redundant belt into cloth cover. Shake the child safety car seat to make sure it is securely attached

**CAUTION!** The diagonal seat belt section must run diagonally backward. You can adjust the course of the belt with your vehicle's adjustable belt deflector on both sides.

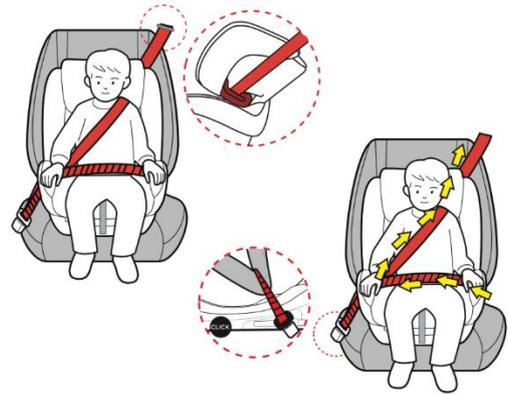

## ISOFIX INSTALLATION


### 5.2.2.2.1 Installed with ISOFIX connector and Belt

Step1: First pull out the belt from the belt ALR. Diagonal belt through Guidance① and lap belt through the belt slot, then put them together through Guidance③ slot.

**NOTE:** Make sure that the diagonal seatbelt section runs over your child's shoulder bone and not in front of his or her neck.

Step2: Lock the tip of the buckle into the vehicle seat buckle with a CLICK noise. Follow the direction of arrow to tighten belt, and put redundant belt into cloth cover. Shake the child safety car seat to make sure it is securely attached.

**CAUTION!** The diagonal seat belt section must run diagonally backward. You can adjust the course of the belt with your vehicle's adjustable belt deflector on both sides.

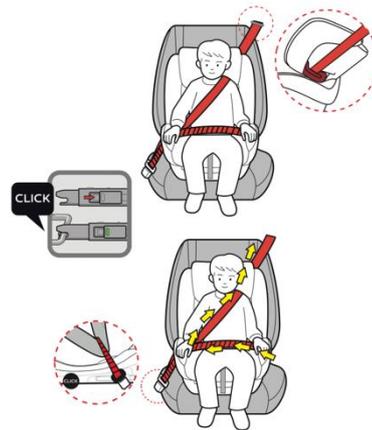

### 5.2.2.2.2 Installed with ISOFIX connector Top Tether and Belt

Step1: Pull out the top tether and press the release button, pull the top tether long enough to hang the latch on the back of the car seat.


Fin the latch on the fixed point and the position of the fixed point are shown in the picture(one of the three positions). Make sure the hook is tightened up.

Step2: First pull out the belt from the belt ALR Diagonal belt through Guidance① and lap belt through the belt slot, then put them together through Guidance③ slot.

**NOTE:** Make sure that the diagonal seatbelt section runs over your child's shoulder bone and not in front of his or her neck.

Step3: Lock the tip of the buckle into the vehicle seat buckle with a CLICK noise. Follow the direction of arrow to tighten belt, and put redundant belt into belt ALR. Shake the child safety car seat to make sure it is securely attached.

**CAUTION!** The diagonal seat belt section must run diagonally backward. You can adjust the course of the belt with your vehicle's adjustable belt deflector on both sides.

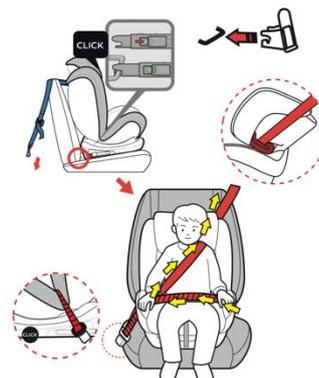

3  
Up to 135cm  
25-36kg